

YAMAHA ZT57300

EN DE FR ES PT IT RU ZH JA

MIXING CONSOLE

MG10XU/MG10

PRECAUTIONS
VORSICHTSMASSNAHMEN
 PRECAUTIONS D'USAGE
 PRECAUÇÕES
 PRECAUZIONI
 ПРЕДУПРЕЖДЕНИЯ
 注意事項
 安全上の注意

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC power adaptor

- Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on it, or over, or on anything else.
- Only use plug specified as correct for the device. The required voltage is printed on the name plate of the device.
- Use the specified adaptor (PA-10), or an equivalent recommended by Yamaha) only when using the power cord as specified in damage to the device.
- Check the electric plug regularly and remove any dirt or dust which may have accumulated on it.

Do not open

- This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and request repair by qualified Yamaha service personnel.

Water warning

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place it in any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water leaks into the device, turn off the power immediately and unplug the power cord from the AC outlet. There may be the device inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

If you notice any abnormality

- When one of the following problems occur, immediately turn the power off and disconnect the electric plug from the outlet. Then have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - It emits unusual smells or smoke.
 - Some liquid has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - If this device or the AC power adaptor should be dropped or damaged, immediately turn the power off, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel.

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The above warning is located on the bottom of the unit.
 L'avertissement ci-dessus est situé sur le fond de l'appareil.

Explanation of Graphical Symbols

Explanation des symboles

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

L'éclair avec une flèche à l'intérieur d'un triangle équilatéral est destiné à attirer l'attention de l'utilisateur sur la présence d'une « tension dangereuse » non isolée à l'intérieur de l'appareil, pouvant être suffisamment élevée pour constituer un risque d'électrocution.

The explanation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the product.

Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à attirer l'attention de l'utilisateur sur la présence d'importantes instructions sur l'emploi ou la maintenance (entretien) de l'appareil dans la documentation fournie.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug will fit in a outlet with two blades and a third grounding prong. The wide blade on the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart apparatus combination to avoid injury from the tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart apparatus combination to avoid injury from the tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- WARNING**
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.
- AVERTISSEMENT**
POUR RÉDUIRE LES RISQUES D'INCENDIE OU DE DÉCHARGE ÉLECTRIQUE, NE EXPOSEZ PAS CET APPAREIL À LA PLUIE OU À L'HUMIDITÉ.

(UL60601_03)

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on a different branch (circuit breaker or fuse) circuit or install AC line filter.

In the case of radio or TV interference, rotate/reorient the antenna. If the antenna length is 300 cm or more, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orange Grove Ave., Buena Park, CA 92609.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

*This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

FCC INFORMATION (U.S.A.)

- IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!**

The information contained in this manual meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use this product.
- IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cables supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization.
- NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates radio frequencies and, if not installed and used according to the instructions found in the user's manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be a source of interference, which can be corrected by turning the power "OFF" and "ON", please try to eliminate the problem by using one of the following measures:
 - Relocate either this product or the device that is being affected by the interference.
 - Utilize power outlets that are on a different branch (circuit breaker or fuse) circuit or install AC line filter.
 - In the case of radio or TV interference, rotate/reorient the antenna. If the antenna length is 300 cm or more, change the lead-in to coaxial type cable.
 - If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orange Grove Ave., Buena Park, CA 92609.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

(class B)

*This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(class B)

COMPLIANCE INFORMATION STATEMENT (DECLARATION OF CONFORMITY PROCEDURE)

Responsible Party : Yamaha Corporation of America
 Address : 6600 Orange Grove Ave., Buena Park, Calif. 90620
 Telephone : 714-522-9011
 Type of Equipment : Mixing Console
 Model Name : MG10XU

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1) This device may not cause harmful interference, and
 2) This device must accept any interference received including interference that may cause undesired operation. See user manual instructions for interference to radio reception is suspected.

*This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(FCC Doc)

IMPORTANT NOTICE FOR THE UNITED KINGDOM Connecting the Plug and Cord

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:
 BLUE – NEUTRAL
 BROWN – LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:
 The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

(class B)

OBSERVERA!

Apparatens kablar i detta apparat är växelströmskåblar (nätet) så länge som den är ansluten till vägguttaget, även om själva apparaten har så kallade AC.

AVVARESE!
 Netaapparatens kablar i detta apparat är IKKE-aftryk, sålänge netaapparatn är dater i stickkontakten, som er tändni – også selvom der er såkaldt på apparatets aftryk.

VAIROITUS:
 Laitteen kaapelitein kytketyön käyttökytkin ei irrota koko laitetta verkosta.

(standby)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

NOTICE

PLEASE READ CAREFULLY BEFORE PROCEEDING
 Please keep this manual in a safe place for future reference.

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC power adaptor

- Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on it, or over, or on anything else.
- Only use plug specified as correct for the device. The required voltage is printed on the name plate of the device.
- Use the specified adaptor (PA-10), or an equivalent recommended by Yamaha) only when using the power cord as specified in damage to the device.
- Check the electric plug regularly and remove any dirt or dust which may have accumulated on it.

Do not open

- This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and request repair by qualified Yamaha service personnel.

Water warning

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place it in any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water leaks into the device, turn off the power immediately and unplug the power cord from the AC outlet. There may be the device inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

If you notice any abnormality

- When one of the following problems occur, immediately turn the power off and disconnect the electric plug from the outlet. Then have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - It emits unusual smells or smoke.
 - Some liquid has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - If this device or the AC power adaptor should be dropped or damaged, immediately turn the power off, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel.

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The above warning is located on the bottom of the unit.
 L'avertissement ci-dessus est situé sur le fond de l'appareil.

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

(class B)

Deutsch

VORSICHTS-MASSNAHMEN
BITTE SORGFÄLTIG DURCHLESEN, EHE SIE FORTFAHREN
Bitte lesen Sie dieses Handbuch sorgfältig auf, damit Sie später einmal nachschlagen können.

- Do not use the device in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric device. Otherwise, the device, or radio may generate noise.
- Do not expose the device to excessive dust or vibration, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day), in order to prevent the possibility of panel deformation, unstable operation, or damage to the internal components.
- Do not place vinyl, plastic or rubber objects on the device, since this might discolor the panel.
- When cleaning the device, use a dry and soft cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.
- Condensation can occur in the device due to rapid, drastic changes in ambient temperature—when the device is moved from one location to another, or when the device is moved from a cold location to a warm location. Condensation may occur in the device, and this moisture or water while condensation is present can cause damage. If there is reason to believe that condensation might have occurred, leave the device for several hours without turning on the power until the condensation has completely dried.
- Use only a gently extended unweighted noise, make sure there is adequate distance (50 cm or more) between the AC power adaptor and the device. Depending on the condition of the connected devices, doing so may cause feedback and may damage the speakers.
- When turning on the AC power in your audio system, always turn the power amplifier (A.S.T.) to avoid speaker damage. When turning the power off, the power amplifier should be turned off FIRST for the same reason.
- Always set the (L) switch to the (L) (standby) position when the device is not in use.
- Even when the (L) switch (Standby/On) switch is in standby status, electricity is still flowing in the device at the minimum level. When you are not using the device for a long time, make sure you unplug the power cord from the wall AC outlet.

- Use an AB type USB cable of less than 1.5 meters. USB 3.0 cables cannot be connected to the computer to the [USB 2.0] terminal, even if power-saving mode of the computer (such as suspend, sleep, standby), before turning on the power to the device, connect the computer to the [USB 2.0] terminal.
- Before plugging/unplugging the USB cable, quit any open application software on the computer.

- When connecting or disconnecting the USB cable, be sure to wait 10 seconds before the next operation.
- While the computer is connected to the device, you should wait for six (6) seconds after the power of these operations:
 - (1) when setting the power of the device, turn the power on again, or
 - (2) when alternately connecting/disconnecting the USB cable.
- Please do not use a USB hub.

