

User Instructions

©2021 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, unsufficient and negligent assembly, installation, rigging, and operation of this product.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DOCUMENT VERSION

Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check <u>www.adj.com</u> for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version <u>></u>	DMX Channel Modes	Notes
06/10/19	1	1.02	6/9/12/14/17/ 30/33/38/41/60	Initial Version
09/16/20	2	1.03	No change	Updated primary/secondary
02/19/21	3	1.05	No change	Updated system menu & color macro chart
06/24/21	4	N/C	N/C	Approval / Rating Updated

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the enviroment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

Introduction	3
Features I Warranty Registration I Installation	4
Safety Precautions	5
IP65 Notice	7
Overview I Installation	8
Manual Tilt Adjustment I Connections	10
DMX Set Up	11
DMX Addressing	12
DMX Modes & Values	13
Color Macro Chart	17
System Menu	18
Primary-Secondary Set Up	22
Pixel Zones	23
Dimmer Curve Chart	24
Glare Shield Installation I Filter Installation	25
Dimensional Drawings	26
Power Linking I Trouble Shooting I Cleaning	27
Limited Warranty (USA Only)	28
Specifications	29

Unpacking: Thank you for purchasing the 15 Hex Bar IP by ADJ Products, LLC. Every unit has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

Introduction: The 15 Hex Bar IP is a DMX intelligent, IP rated LED wash fixture. This fixture can be used in a stand alone mode or connected in a Primary/Secondary configuration.

This product is intended to be used by professionally trained personnel only and is not suitable for private use.

Customer Support: Contact ADJ Service for any product related service and support needs. Also visit forums.adj.com with questions, comments or suggestions.

Parts: To purchase parts online visit http://parts.americandj.com

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST Voice: 800-322-6337 | Fax: 323-582-2941 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET Voice: +31 45 546 85 60 | Fax: +31 45 546 85 96 | support@adj.eu

ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040 323-582-2650 | Fax 323-532-2941 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands +31 (0)45 546 85 00 | Fax +31 45 546 85 99 www.adj.eu | info@americandj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000 +52 (728) 282-7070

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact ADJ Products, LLC.

PLEASE recycle the shipping carton when ever possible.

- Multi-Colors
- Five Operating Modes
- Electronic Dimming 0-100%
- DMX-512 protocol
- IP65 Locking 5-Pin XLR Connections In/Out
- 10 DMX Channel Modes: 6 / 9 / 12 / 14 / 17 / 30 / 33 / 38 / 41 / 60
- Multiple Unit Power Linking (See page 27)

Included:

- 1 x IP65 Locking Power Cable
- 1 x Removable Frost/Diffuser Filter
- 1 x Removable Glare Shield
- 2 x Omega Brackets

15 Hex Bar IP

Warranty Registration

The 15 Hex Bar IP carries a 2 year limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight prepaid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting our customer support team on our customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.

Safety Precautions

- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to
 remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk
 of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 27 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the fixture.
 - C. The fixture does not appear to operate normally or exhibits a marked change in performance.
 - D. The fixture has fallen and/or subjected to extreme handling.

ACAUTION



AVOID DIRECT EYE & SKIN EXPOSURE. WEAR PROPER EYE & SKIN PROTECTION. SEE MANUAL FOR SAFETY INSTRUCTIONS.

RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET (UV) RADIATION!

FIXTURE EMITS HIGH INTENSITY ULTRAVIOLET (UV) LIGHT FROM THE UV LED.

WEAR PROPER EYE AND SKIN PROTECTION.

AVOID PROLONGED PERIODS OF EXPOSURE TO THE UV LED.

AVOID WEARING WHITE COLOR CLOTHING AND/OR USING (UV) PAINTS ON SKIN.

AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES SHORTER THAN 11 feet (3.3m).

DO NOT OPERATE FIXTURE WITH DAMAGED OR MISSING EXTERNAL COVER.

DO NOT LOOK DIRECTLY INTO THE (UV) LIGHT AND/OR VIEW (UV) LIGHT DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT.

INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DISORDERS, OR INDIVIDUALS USING PHOTOSENSITIVE MEDICATION, MAY RECEIVE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET (UV) LIGHT EMITTED FROM THIS FIXTURE.

IP65 RATED


An IP rated lighting fixture is one, which is commonly installed in outdoor environments and has been designed with an enclosure that effectively protects the ingress (entry) of external foreign objects such as dust and water. The International Protection (IP) rating system is commonly expressed as "IP" (Ingress Protection) followed by two numbers (i.e. IP65) where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An IP65 rated lighting fixture is one, which has been designed and tested to protect against the ingress of dust (6) and low-pressure water jets from any direction (5).

MARINE/COASTAL ENVIRONMENT INSTALLATIONS



NOT suitable for marine and/or coastal environment installations. Installing this fixture in a marine and/or coastal environment may cause corrosion and/ or excessive wear to the interior and/or exterior components of the fixture. Damages and/or performance issues resulting from installation in a marine

and/or coastal environment will void the manufactures warranty and will NOT be subJect to any warranty claims and/or repairs.

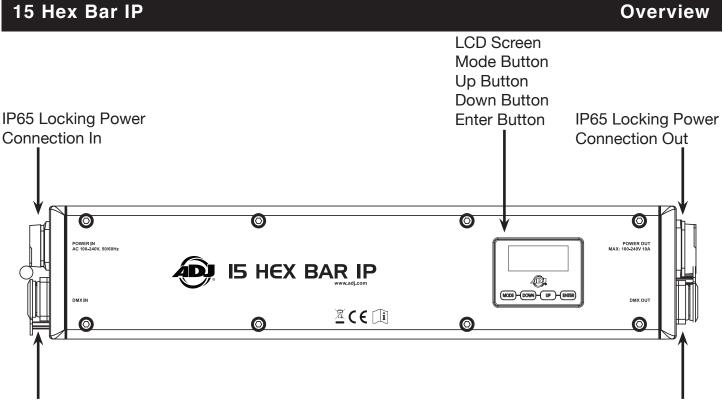

IP65 5-Pin XLR Connection In

IP65 5-Pin XLR Connection Out

15 Hex Bar IP

Installation

Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times the unit's weight. *ALWAYS* use safety cables that can hold 12 times the weight of the unit when installing the fixture.


This equipment must be installed by a professional, and it must be installed in a place where it is out of the reach of people's grasp. Overhead mounting requires extensive experience, including calculating working load limits, installation material being used, and perodic safety inspection of all installation material and unit. If you lack these qualifications, do not attempt the installation yourself. These installation should be checked by a skilled person once a year.

Ensure ALL connections and end caps are properly sealed with a non-conductive dielectric grease (available at most electrical suppliers) to prevent water ingress/condensation and/or corrosion.

The 15 Hex Bar IP is fully operational in three different mounting positions; hanging upside-down, mounted sideways on trussing, or set on a flat level surface. Be sure this fixture is kept at least 12m (40ft) away from any flammable materials (decoration etc.). *ALWAYS* use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Screw one clamp via a M12 screw and nut into the Omega holder. Insert the quick-lock fasteners of the Omega holder into the respective holes of the adjustable mounting bracket. Tighten the quick-lock fasteners fully clockwise. Pull the safety-cable through the attachment openings and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw. **PLEASE SEE THE NEXT PAGE FOR CLAMP AND SAFETY CABLE INSTALL.**


ADJ Products, LLC - www.adj.com - 15 Hex Bar IP User Manual Page 8

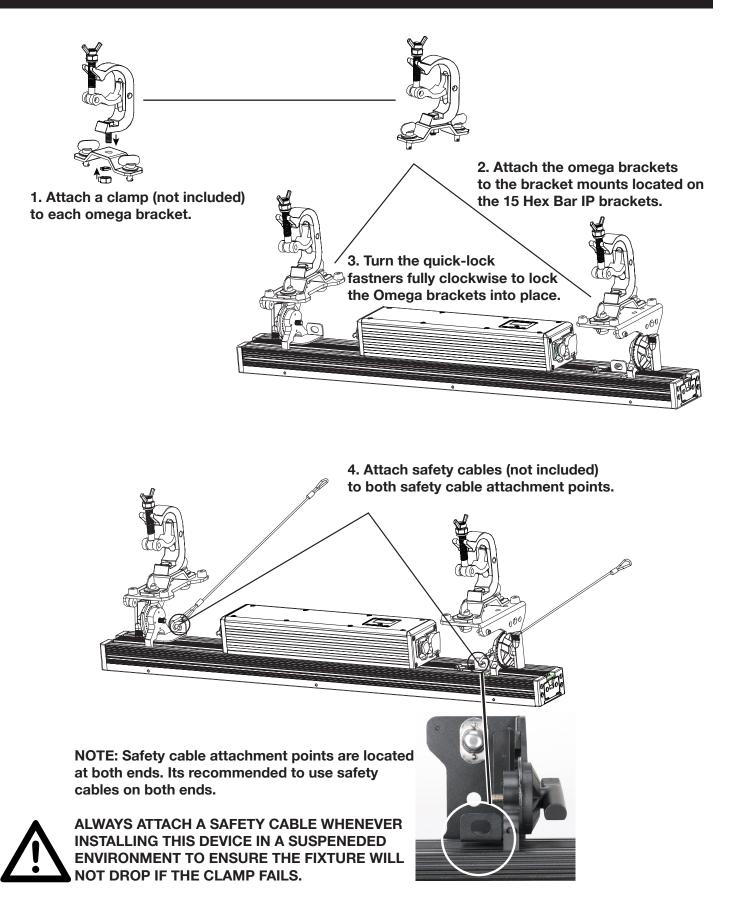

ADJ Products, LLC - www.adj.com - 15 Hex Bar IP User Manual Page 9

Manual Tilt Adjustment

The bar angle is adjustable manually using the brackets located on each side of the unit. Simply loosen the tilt adjustment knobs attached to each mounting bracket and adjust the bracket accordingly. After making your desired set up, securely tighten the tilt adjustment knobs. See picture below for a 90 degree set up.

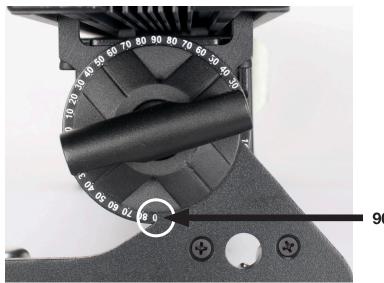

90 Degree Setting

15 Hex Bar IP

Connections

ENSURE ALL CONNECTIONS AND END CAPS ARE PROPERLY SEALED WITH A DIELECTRIC GREASE (AVAILABLE AT MOST ELECTRICAL SUPPLIERS) TO PREVENT WATER CORROSION AND/OR ELECTRICAL SHORT CIRCUIT.

TO MAINTAIN IP65 RATING INTEGRITY AND PREVENT WATER FROM ENTERING THE FIXTURE, ALL UNUSED CONNECTION RUBBER CAPS MUST BE SEALED.



DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX Operation): The 15 Hex Bar IP can be controlled via DMX-512 protocol. The 15 Hex Bar IP has 10 DMX channel modes. The DMX address is set on the back panel of the 15 Hex Bar IP. Your unit and your DMX controller require a standard 5-pin XLR connector for data input and data output. We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.

All fixtures should be given a DMX starting address when using a DMX controller, so the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to "listen" to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way, in other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to "listen" to the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

In the case of the 15 Hex Bar IP, when in 6 channel mode you should set the starting DMX address of the first unit to 1, the second unit to 7 (6 + 1), the third unit to 13 (7 + 6), and so on. (See chart below for more details.)

Channel Mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address
6 Channels	1	7	13	19
9 Channels	1	10	19	28
12 Channels	1	13	25	37
14 Channels	1	15	29	43
17 Channels	1	18	35	52
30 Channels	1	31	61	91
33 Channels	1	34	67	100
38 Channels	1	39	77	115
41 Channels	1	42	83	124
60 Channels	1	61	121	181

DMX Modes & Values

1 1	6 Ch	9 Ch	12 Ch	14 Ch	17 Ch	30 Ch	33 Ch	38 Ch	41 Ch	60 Ch	VALUES	FUNCTIONS
2 3 2 2 1 1 1 000-255 GREEN (ALL LEDS) 0-109% 3 3 5 3	1	1	1	1	1						000-255	
2 2 3 2 2 - - - 000-255 0-100% - - 3 3 5 3 3 - 1 1 1 000-255 GREEN FINE (ALL LEDS) 4 4 7 4 4 - 1 1 1 000-255 BLUE FINE (ALL LEDS) 4 4 7 4 4 - 1 1 000-255 BLUE FINE (ALL LEDS) 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 5 9 5 000-255 AMBER FINE (ALL LEDS) 6 6 1 1 1 1 1 1 000-255 RED			2								000-255	RED FINE (ALL LEDS)
3 3 5 3 3 1 1 1 00 000-255 BLUE (ALL LEDS) 0-100% 4 4 7 000-255 BLUE (ALL LEDS) 0-100% 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00 20 0.00	2	2	3	2	2						000-255	. ,
3 3 5 3 3 3 1 1 1 1 000-255 0-100% 4 4 7 4 4 1 1 1 1 000-255 BLUE FINE (ALL LEDS) 0-100% 5 5 9 5 5 5 9 600-255 AMBER (ALL LEDS) 10 11 1 1 1 1 1 000-255 BED (ZONE #1) 000-00% <td></td> <td></td> <td>4</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>000-255</td> <td>GREEN FINE (ALL LEDS)</td>			4								000-255	GREEN FINE (ALL LEDS)
4 4 7 4 4 0 0.0 0.00 000-255 WHITE (ALL LEDS) 0-100% 5 5 9 5 5 9 5 5 0 0.00 000-255 WHITE FINE (ALL LEDS) 0-100% 6 10 10 1 1 1 1 000-255 AMBER (ALL LEDS) 0-100% 6 6 11 6 6 1 1 1 1 000-255 UV (ALL LEDS) 0-100% 6 6 11 1 1 1 1 000-255 RED (200E #1) 0-100% 7 7 7 1 1 1 1 000-255 RED (200E #1) 0-100% 7 7 7 7 7 3 3 5 000-255 RED (20NE #1) 0-100% 7 7 7 7 7 3 3 5 000-255 BLUE FINE (20NE #1) 0-100% 7 7 7 7 7 000-255 BLUE FINE (20NE #1) 0-100% 7 7 7 7 10 000-255	3	3	5	3	3						000-255	
4 7 4 4 7 6 1 000-253 0-100% 1 8 1 1 1 1 1 000-255 WHITE FINE (ALL LEDS) 5 5 9 5 5 1 1 1 000-255 AMBER (ALL LEDS) 6 10 10 1 1 1 1 000-255 AMBER FINE (ALL LEDS) 6 6 11 6 6 1 1 1 1 000-255 UV (ALL LEDS) 1 1 1 1 1 1 000-255 UV FINE (ALL LEDS) 1 1 1 1 1 000-255 RED (ZONE #1) 1 1 1 1 1 000-255 RED (ZONE #1) 1 1 1 1 1 1 000-255 RED (ZONE #1) 1 1 1 1 1 1 1 000-255 RED FINE (ZONE #1) </td <td></td> <td></td> <td>6</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>000-255</td> <td>BLUE FINE (ALL LEDS)</td>			6								000-255	BLUE FINE (ALL LEDS)
5 5 9 5 5 5 1 1 1 1 000-255 AMBER (ALL LEDS) 0-100% 6 6 11 6 6 11 6 6 11 6 6 11 1 1 1 1 1 000-255 AMBER (ALL LEDS) 0-100% 6 6 11 6 6 1 1 1 1 000-255 UV (ALL LEDS) 0-100% 1 12 12 1 1 1 1 000-255 UV FINE (ALL LEDS) 0-100% 1 12 12 1 1 1 1 000-255 RED (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 RED FINE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 RED FINE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 BLUE (ZONE #1) 0-100% 0.100%	4	4	7	4	4						000-255	
3 3			8								000-255	WHITE FINE (ALL LEDS)
6 6 11 6 6 000-255 UV (ALL LEDS) 0-100% 1 12 1 1 1 1 1 000-255 UV FINE (ALL LEDS) 1 1 1 1 1 1 1 000-255 RED (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 RED (ZONE #1) 0-100% 1 1 1 1 1 1 000-255 RED FINE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 REEN FINE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 BLUE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 BLUE (ZONE #1) 0-100% 1 1 1 1 1 1 1 000-255 BLUE (ZONE #1) 0-100% 1 1 1	5	5	9	5	5						000-255	
b 11 b b 1 1 1 10 000-255 0-100% 12 12 12 12 12 12 12 12 12 12 12 12 12 12 12 12 12 12 000-255 RED (20NE #1) 0-100% 12 12 12 12 12 12 000-255 RED (ZONE #1) 0-100% 12 12 12 12 12 14 14 000-255 RED (ZONE #1) 0-100% 14 12 12 12 14 14 000-255 GREEN (ZONE #1) 0-100% 15 14 14 14 14 000-255 BLUE (ZONE #1) 0-100% 16 15 15 15 16 000-255 BLUE FINE (ZONE #1) 0-100% 17 14 14 14 14 7 000-255 BLUE FINE (ZONE #1) 0-100% 18 14 14 14 14 16 000-255 AMBER (Z			10								000-255	AMBER FINE (ALL LEDS)
Image: Second system 1 000-255 RED FINE (ZONE #1) 0-100% Image: Second system 2 2 2 2 2 3 000-255 GREEN (ZONE #1) 0-100% Image: Second system 3 3 3 3 5 000-255 GREEN FINE (ZONE #1) 0-100% Image: Second system 3 3 3 3 5 000-255 BLUE fINE (ZONE #1) 0-100% Image: Second system 4 4 4 4 7 000-255 BLUE fINE (ZONE #1) 0-100% Image: Second system 5 5 5 5 9 000-255 AMBER (ZONE #1) 0-100% Image: Second system 5 5 5 5 9 000-255 AMBER fINE (ZONE #1) 0-100% Image: Second system 6 6 6 6 11 000-255 AMBER fINE (ZONE #1) 0-100% Image: Second system 7 7 7 7 13 </td <td>6</td> <td>6</td> <td>11</td> <td>6</td> <td>6</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>000-255</td> <td></td>	6	6	11	6	6						000-255	
Image: Solution of the second state			12								000-255	UV FINE (ALL LEDS)
Image: Section of the section of th						1	1	1	1	1	000-255	
1 1 2 2 2 3 000-255 0-100% 1 1 1 1 4 000-255 GREEN FINE (ZONE #1) 1 3 3 3 3 5 000-255 BLUE (ZONE #1) 1 1 4 4 4 4 7 000-255 BLUE FINE (ZONE #1) 1 1 4 4 4 7 000-255 BLUE FINE (ZONE #1) 1 1 4 4 4 7 000-255 WHITE FINE (ZONE #1) 1 1 4 4 4 7 000-255 WHITE FINE (ZONE #1) 1 1 1 1 000-255 AMBER (ZONE #1) 100 1 1 1 000-255 AMBER FINE (ZONE #1) 100 1000% 1 1 1 000-255 AMBER FINE (ZONE #1) 100 1000% 1 1 000-255 UV (ZONE #1) 100 1000% 100% 1 1 1 000-255 UV FINE (ZONE #2) 100% <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>2</td> <td>000-255</td> <td>RED FINE (ZONE #1)</td>										2	000-255	RED FINE (ZONE #1)
Image: Second system of the						2	2	2	2	3	000-255	
1 1 3 3 3 3 3 3 000-255 0-100% 1 1 1 1 1 6 000-255 BLUE FINE (ZONE #1) 1 1 4 4 4 7 000-255 WHITE (ZONE #1) 1 1 1 1 1 8 000-255 WHITE FINE (ZONE #1) 1 1 5 5 5 5 9 000-255 AMBER (ZONE #1) 1 1 5 5 5 5 9 000-255 AMBER (ZONE #1) 1 1 1 000-255 AMBER FINE (ZONE #1) 0-100% 1 1 000-255 AMBER FINE (ZONE #1) 0-100% 1 1 000-255 UV (ZONE #1) 0-100% 1 1 000-255 UV FINE (ZONE #1) 0-100% 1 1 000-255 UV FINE (ZONE #1) 0-100% 1 1 000-255 UV FINE (ZONE #2) 0-100% 1 1 000-255 RED FINE (ZONE #2) 0-										4	000-255	GREEN FINE (ZONE #1)
Image: Section of the section of th						3	3	3	3	5	000-255	
1 1 4 4 4 7 000-255 0-100% 1 1 1 1 1 1 8 000-255 WHITE FINE (ZONE #1) 1 1 5 5 5 5 9 000-255 AMBER (ZONE #1) 1 1 000-255 AMBER FINE (ZONE #1) 0-100% 1 0 000-255 AMBER FINE (ZONE #1) 0-100% 1 0 000-255 AMBER (ZONE #1) 0-100% 1 0 000-255 AMBER FINE (ZONE #1) 0-100% 1 0 0 1 000-255 UV (ZONE #1) 0 1 0 000-255 UV FINE (ZONE #1) 0 1 7 7 7 13 000-255 RED (ZONE #2) 0-100% 1 14 000-255 RED FINE (ZONE #2) 0-100% 0-100% 1 1 1 000-255 RED FINE (ZONE #2) 0-100% 0-100% 0-100% 0-100% 1 1 000-255 GREEN FINE (ZONE #2) 0-100%										6	000-255	BLUE FINE (ZONE #1)
Image: Constraint of the image: Constrai						4	4	4	4	7	000-255	
Image: Sector of the sector										8	000-255	WHITE FINE (ZONE #1)
Image: Section of the section of th						5	5	5	5	9	000-255	
Image: Section of the section of th										10	000-255	AMBER FINE (ZONE #1)
Image: Second system 7 7 7 7 13 000-255 RED (ZONE #2) 0-100% Image: Second system Image: Second s						6	6	6	6	11	000-255	
1 1 1 1 000-255 0-100% 1 1 000-255 RED FINE (ZONE #2) 1 1 000-255 RED FINE (ZONE #2) 1 1 000-255 RED FINE (ZONE #2) 1 1 16 000-255 GREEN (ZONE #2) 1 1 16 000-255 GREEN FINE (ZONE #2) 1 1 1 16 000-255 GREEN FINE (ZONE #2) 1 1 1 16 000-255 GREEN FINE (ZONE #2) 1 1 1 17 000-255 GREEN FINE (ZONE #2)										12	000-255	UV FINE (ZONE #1)
Image: Second system Image: Second system <th< td=""><td></td><td></td><td></td><td></td><td></td><td>7</td><td>7</td><td>7</td><td>7</td><td>13</td><td>000-255</td><td></td></th<>						7	7	7	7	13	000-255	
8 8 8 8 15 000-255 0-100% 10 10 16 000-255 GREEN FINE (ZONE #2) 10 9 9 9 17 000-255 BLUE (ZONE #2) 100% 100% 100% 100% 100% 100%										14	000-255	RED FINE (ZONE #2)
9 9 9 17 000-255 BLUE (ZONE #2) 0-100%						8	8	8	8	15	000-255	
9 9 9 9 17 000-255 0-100%										16	000-255	GREEN FINE (ZONE #2)
18 000-255 BLUE FINE (ZONE #2)						9	9	9	9	17	000-255	
										18	000-255	BLUE FINE (ZONE #2)

ADJ Products, LLC - www.adj.com - 15 Hex Bar IP User Manual Page 13

6 Ch	9 Ch	12 Ch	14 Ch	17 Ch	30 Ch	33 Ch	38 Ch	41 Ch	60 Ch	VALUES	FUNCTIONS
					10	10	10	10	19	000-255	WHITE (ZONE #2) 0-100%
									20	000-255	WHITE FINE (ZONE #2)
					11	11	11	11	21	000-255	AMBER (ZONE #2) 0-100%
									22	000-255	AMBER FINE (ZONE #2)
					12	12	12	12	23	000-255	UV (ZONE #2) 0-100%
									24	000-255	UV FINE (ZONE #2)
					13	13	13	13	25	000-255	RED (ZONE #3) 0-100%
									26	000-255	RED FINE (ZONE #3)
					14	14	14	14	27	000-255	GREEN (ZONE #3) 0-100%
									28	000-255	GREEN FINE (ZONE #3)
					15	15	15	15	29	000-255	BLUE (ZONE #3) 0-100%
									30	000-255	BLUE FINE (ZONE #3)
					16	16	16	16	31	000-255	WHITE (ZONE #3) 0-100%
									32	000-255	WHITE FINE (ZONE #3)
					17	17	17	17	33	000-255	AMBER (ZONE #3) 0-100%
									34	000-255	AMBER FINE (ZONE #3)
					18	18	18	18	35	000-255	UV (ZONE #3) 0-100%
									36	000-255	UV FINE (ZONE #3)
					19	19	19	19	37	000-255	RED (ZONE #4) 0-100%
									38	000-255	RED FINE (ZONE #4)
					20	20	20	20	39	000-255	GREEN (ZONE #4) 0-100%
									40	000-255	GREEN FINE (ZONE #4)
					21	21	21	21	41	000-255	BLUE (ZONE #4) 0-100%
									42	000-255	BLUE FINE (ZONE #4)
					22	22	22	22	43	000-255	WHITE (ZONE #4) 0-100%
									44	000-255	WHITE FINE (ZONE #4)
					23	23	23	23	45	000-255	AMBER (ZONE #4) 0-100%
									46	000-255	AMBER FINE (ZONE #4)
					24	24	24	24	47	000-255	UV (ZONE #4) 0-100%
									48	000-255	UV FINE (ZONE #4)

ADJ Products, LLC - www.adj.com - 15 Hex Bar IP User Manual Page 14

6 Ch	9 Ch	12 Ch	14 Ch	17 Ch	30 Ch	33 Ch	38 Ch	41 Ch	60 Ch	VALUES	FUNCTIONS
					25	25	25	25	49	000-255	RED (ZONE #5) 0-100%
									50	000-255	RED FINE (ZONE #5)
					26	26	26	26	51	000-255	GREEN (ZONE #5) 0-100%
									52	000-255	GREEN FINE (ZONE #5)
					27	27	27	27	53	000-255	BLUE (ZONE #5) 0-100%
									54	000-255	BLUE FINE (ZONE #5)
					28	28	28	28	55	000-255	WHITE (ZONE #5) 0-100%
									56	000-255	WHITE FINE (ZONE #5)
					29	29	29	29	57	000-255	AMBER (ZONE #5) 0-100%
									58	000-255	AMBER FINE (ZONE #5)
					30	30	30	30	59	000-255	UV (ZONE #5) 0-100%
									60	000-255	UV FINE (ZONE #5)
			7	7			31	31		000-255	COLOR MACROS See Color Macro Chart on page 16
			8	8			32	32		000-255	COLOR TEMPERATURES 2700-7000K
	7		9	9		31	33	33		000-031 032-063 064-095 096-127 128-159 160-191 192-223 224-255	SHUTTER & STROBE LEDs Off LEDs On Strobing Slow - Fast LEDs On Pulse Strobing in Sequences LEDs On Random Strobing Slow - Fast LEDs On
	8		10	10		32	34	34		000-255	MASTER DIMMER 0% - 100%
	9		11	11		33	35	35		000-255	DIMMER FINE 0% - 100%
				12				36		000-010 011-026 027-043 044-060 061-076 077-093 094-110 111-126 127-143 144-160 161-176 177-193 194-210 211-226 227-255	AUTO PROGRAMS Off Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 Auto Program 6 Auto Program 7 Auto Program 7 Auto Program 8 Auto Program 9 Auto Program 10 Auto Program 11 Auto Program 12 Auto Program 13 No Function


6 Ch	9 Ch	12 Ch	14 Ch	17 Ch	30 Ch	33 Ch	38 Ch	41 Ch	60 Ch	VALUES	FUNCTIONS
				13				37		000-255	AUTO PROGRAM SPEED Slow - Fast
											AUTO PROGRAM FADE
				14				38		000-255	Slow - Fast
											DIMMER MODES
										000-020	Standard
										021-040	Stage
										041-060	TV
										061-080	Architectural
										081-100	Theatre
										101-120	Stage 2
											DIMMER DELAY TIME
										121	0.1Sec.
										122	0.2Sec.
										123	0.3Sec.
										124	0.4Sec.
										125	0.5Sec.
			12	15			36	39		126	0.6Sec.
										127	0.7Sec.
										128 129	0.8Sec. 0.9Sec.
										129	1.0Sec.
										130	1.5Sec.
										132	2.0Sec.
										133	3.0Sec.
										134	4.0Sec.
										135	5.0Sec.
										136	6.0Sec.
										137	7.0Sec.
										138	8.0Sec.
										139	9.0Sec.
										140	10Sec.
										141-255	Default to Unit Setting
											REFRESH RATES
										000-015	Default to Unit Setting
										016-030	900Hz
										031-045	1000Hz
										046-060	1100Hz
										061-075	1200Hz
										076-090	1300Hz
			13	16			37	40		091-105	1400Hz
			-	_				-		106-120	1500Hz
										121-135	2500Hz
										136-150	4000Hz
										151-165	5000Hz
										166-180	10000Hz
										181-195	15000Hz
										196-210	20000Hz
										211-225	25000Hz
										226-255	No Function
											GAMMA
										000-020	Default to Unit Setting
										021-040	2.0
			14	17			38	41		041-060	2.2
			17				55	ŦI		061-080	2.4
										081-100	2.6
										101-120	2.8
										121-255	No Function

Color No.	DMX		R	GBWA+UV	COLOR INTEN	SITY	
	VALUE	RED	GREEN	BLUE	WHITE	AMBER	UV
OFF	0	0	0	0	0	0	0
Color1	1-4	80	255	234	80	0	0
Color2	5-8	80	255	164	80	0	0
Color3	9-12	77	255	112	77	0	0
Color4	13-16	117	255	83	83	0	0
Color5	17-20	160	255	77	77	0	0
Color6	21-24	223	255	83	83	0	0
Color7	25-28	255	243	77	77	0	0
Color8	29-32	255	200	74	74	0	0
Color9	33-36	255	166	77	77	0	0
Color10	37-40	255	125	74	74	0	0
Color11	41-44	255	97	77	74	0	0
Color12	45-48	255	71	77	71	0	0
Color13	49-52	255	83	134	83	0	0
Color14	53-56	255	93	182	93	0	0
Color15	57-60	255	96	236	96	0	0
Color16	61-64	238	93	255	93	0	0
Color17	65-68	196	87	255	87	0	0
Color18	69-72	150	90	255	90	0	0
Color19	73-76	100	77	255	77	0	0
Color20	77-80	77	100	255	77	0	0
Color21	81-84	67	148	255	67	0	0
Color22	85-88	77	195	255	77	0	0
Color23	89-92	77	234	255	77	0	0
Color24	93-96	158	255	144	144	0	0
Color25	97-100	255	251	153	153	0	0
Color26	101-104	255	175	147	147	0	0
Color27	105-108	255	138	186	138	0	0
Color28	109-112	255	147	251	147	0	0
Color29	113-116	151	138	255	138	0	0
Color30	117-120	100	138	255	138	0	0
Color31	121-124	138	169	255	138	0	0
Color32	125-128	255	255	255	255	0	0

Color No.	DMX		F	RGBWA+UV	COLOR INTEN	ISITY	
	VALUE	RED	GREEN	BLUE	WHITE	AMBER	UV
Color33	129-132	255	206	143	0	0	0
Color34	133-136	254	177	153	0	0	0
Color35	137-140	254	192	138	0	0	0
Color36	141-144	254	165	98	0	0	0
Color37	145-148	254	121	0	0	0	0
Color38	149-152	176	17	0	0	0	0
Color39	153-156	96	0	11	0	0	0
Color40	157-160	234	139	171	0	0	0
Color41	161-164	224	5	97	0	0	0
Color42	165-168	175	77	173	0	0	0
Color43	169-172	119	130	199	0	0	0
Color44	173-176	147	164	212	0	0	0
Color45	177-180	88	2	163	0	0	0
Color46	181-184	0	38	86	0	0	0
Color47	185-188	0	142	208	0	0	0
Color48	189-192	52	148	209	0	0	0
Color49	193-196	0	46	35	0	0	0
Color50	197-200	8	107	222	0	0	0
Color51	201-204	107	156	231	0	0	0
Color52	205-208	165	198	247	0	0	0
Color53	209-212	0	83	115	0	0	0
Color54	213-216	0	97	166	0	0	0
Color55	217-220	1	100	167	0	0	0
Color56	221-224	0	40	86	0	0	0
Color57	225-228	209	219	182	0	0	0
Color58	229-232	42	165	85	0	0	0
Color59	233-236	255	0	0	0	0	0
Color60	237-240	0	255	0	0	0	0
Color61	241-244	0	0	255	0	0	0
Color62	245-248	0	0	0	255	0	0
Color63	249-252	0	0	0	0	255	0
Color64	253-255	0	0	0	0	0	255

SYSTEM MENU

The fixture includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made. (See image below) During normal operation, pressing the **MENU** button once will access the fixture's main menu. Once in the main menu, you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. When you reach a field that requires adjusting, press the **ENTER** button to access that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MENU** button.

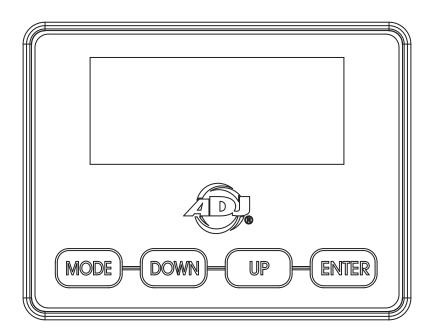

MENU	SUBMENU		OPTIONS	DESCRIPTION		
	Address	001-512		DMX Addressing		
DMX SET	Ch. Mode	6CH / 9CH / 12C 33CH / 38CH / 4	CH / 14 CH / 17CH / 30CH / 1CH / 60CH	DMX Channel Mode Selection		
	No DMX	Hold / Blackout /	Int. Prog	DMX Lost Status		
	Primary	On / Off		Primary Setting		
	Secondry	On / Off		Secondry Setting		
	Dim Mode	Standard / Stage Theatre / Stage 2 DimSpeed: 0.1-0.	/ TV / Archi (Architectural) / 9s ~ 1-10s	Dimming Curve Modes Dimming Speed		
Persnity	LEDRfrsh (LED Refresh Rate)) / 1 <mark>200 /</mark> 1300 / 1400 / 1500 / 00 / 10000 / 15000 / 20000 /	LED Refresh Setting		
(Personality)	Gamma	2.0/2.2/2.4/2.6	6 / 2.8	Gamma Brightness		
	Diamlari	SaveDlay: 1~10N	Л	Display Shutoff Time		
	Display	Lock: OFF / 1M~		Display Control Lock		
	Comies	Pass Code = 50	Calibrat (Calibration) (Pass Code = 050)	Calibration Adjustment		
	Service	Pass Code = 50	Restore: YES / NO (Pass Code = 011)	Restore Factory Settings		
	Red	000-255				
	Green	000-255				
	Blue	000-255				
	White	000-255		Manual Control Settings		
Manual	Amber	000-255				
	UV	000-255				
	Strobe	000-255				
	MastrDim	000-255		-		
	ClrMacro	000-064				
	ClrTemp	000-255				
	Prog 1	Speed: 000-255 F		Program 1 with Adjustments		
	Prog 2	Speed: 000-255 F		Program 2 with Adjustments		
	Prog 3	Speed: 000-255 F		Program 3 with Adjustments		
	Prog 4	Speed: 000-255 F		Program 4 with Adjustments		
	Prog 5	Speed: 000-255 F		Program 5 with Adjustments		
IntProgs	Program 6			Program 6 with Adjustments		
(Internal Programs			Program 7 with Adjustments			
,	Program 8	Speed: 000-255 F	ade: 000-255	Program 8 with Adjustments		
	Program 9	Speed: 000-255 F		Program 9 with Adjustments		
	Program 10	Speed: 000-255 F		Program 10 with Adjustments		
	Program 11	Speed: 000-255 F		Program 11 with Adjustments		
	Program 12	Speed: 000-255 F		Program 12 with Adjustments		
	Program 13	Speed: 000-255 F	-ade: 000-255	Program 13 with Adjustments		

MENU	SUBMENU	OPTIONS	DESCRIPTION
		PwrOnHr1: XXXXX	Total Power On Time (Not Resettable)
	Hours	PwrOnHr2: XXXXX	Current Power On Time (Resettable)
		PwrOnRst: Pass Code = 050	Reset Current Power On Time
		XXX F / XXX C	Current Temperature
Info. (Information)	-	MaxTemp1: XXX F / XXX C	Maximum Temperature ⁽¹⁾ Reached (Resettable) (See Note 1 below)
	Temp	MaxTemp2: XXX F / XXX C	Maximum Temperature ⁽²⁾ Reached (Not Resettable) (See Note 2 below)
		TempRst.: YES / NO - Pass Code = 050	Reset MaxTemp1
	DMXValue (3) (See Note 3 below)	Red / Green / Blue / White / Amber / UV / ClrMacro / ClrTemp / Strobe / MastrDim / DimFine / DimMode / LEDRfrsh / Gamma	Current DMX Value Settings
	SoftVers	X.XX	Current Software Version

Notes:

(1) Current Maximum Temperature - Maximum fixture temp. that has been recorded, before reset and after reset.

(2) Maximum Temperature - Overall maximum fixture temp. that has been recorded. (Not Resettable)

(3) DMX Value options depend on the DMX Channel mode the fixture is set to.

System Menu: When making adjustments press ENTER to confirm your setup. To exit without making any adjustments press the MENU button. The display will lock after 30 seconds, press the MENU button for 3 seconds to unlock.

DMX SET - The submenus listed under DMX SET are as follows: Address, Ch. Mode, and No DMX.

- Address In this submenu you are able to find and set your desired DMX address.
- *Ch. Mode* In this submenu you are able to find and set your desired DMX channel mode.
- **No DMX** This setting is used as a precaution mode in case the DMX signal is lost or interrupted. The operating mode chosen is the running mode the fixture will go into when the DMX signal is lost. Listed below are the 3 modes.
- HOLD This setting will have the fixture stay in the last DMX setup.
- **BLACKOUT** This setting will have the fixture automatically go into blackout mode.
- Int.Prog This setting will have the fixture automatically run 1 of 13 internal programs.

PERSNLTY (PERSONALITY) - The submenus listed under **Persnlity (PERSONALITY)** are as follows: *Primary, Secondry, Dim Mode, LED Refresh Rate (LEDRfrsh), Gamma, Display*, and *Service*.

- **Primary** Set the unit to act as the Primary unit in a Primary-Secondary configuration. See Primary-Secondary configuration on page for more information.
- **Secondry** Set the unit to act as the secondary unit in a primary-secondary configuration. See Primary-Secondary configuration on page for more information.
- **Dim Mode** In this submenu you are able to set your desired dimmer mode. The dimming speed is also adjustable in this submenu.
- LEDRfrsh (LED Refresh Rate) In this submenu you are able to set your desires LED refresh rate.
- Gamma In this submenu you are able to set your desires gamma brightness.
- **Display** In this submenu you you are able to activate/adjust the display shutoff time, and activate/ deactivate the display lock.
- **Service** In this submenu you are able to access and adjust/change: the calibration (effect adjust), activate the service port, update software, and restore the factory settings.

MANUAL - This menu is used for manual control of the RGBWA+UV LEDs, strobe, primary dimmer, color macros, and color temperature.

INTPROGS (INTERNAL PROGRAMS) - This menu allows you to select 1 of 13 internal programs to run. Program speed and fade speed are adjustable. The selected program will also run when "Int. Prog." is selected under the "No DMX" setting.

INFO. (INFORMATION) - The submenus listed under **Info.** (**INFORMATION** are as follows: *Fixture Hours, Fixture Temperatures, DMX Values*, and *Software Version*.

- HOURS (FIXTURE HOURS)

PwrOnHr1 - The **TOTAL** power ON running time of the unit is displayed. This time **CANNOT** be reset.

PwrOnHr2 - The **CURRENT** power ON running time of the unit is displayed. This running time may not be the same as the total power ON running time displayed under **"Power On Time"**. This time **CAN** be reset.

PwrOnRst - Reset the current power ON running time that is displayed under "PwrOnHr2".

- TEMP. (FIXTURE TEMPERATURES)

XXX - Current temperature

MaxTemp1 - Maximum current temperature reached. This temperature *CAN* be reset.

MaxTemp2 - Overall maximum fixture temperature that has been recorded. This temperature *CANNOT* be reset.

TempRst - Reset the maximum temperature displayed under "MaxTemp1".

- DMXValue Displays the DMX values of any DMX channel that is currently in use. NOTE: DMX value options depend on the current DMX channel mode setting.
- SoftVers (Software Version) Current software version is displayed.

15 Hex Bar IP

Primary-Secondary Configuration

Primary-Secondary Configuration:

This function will allows you to link units together to run in a Primary-Secondary set-up. In a Primary-Secondary set up one unit will act as the controlling unit and the others will react to the controlling units built-in programs. Any unit can act as a Primary or as a Secondary however, only one unit can be programmed to act as the "Primary."

Primary-Secondary Connections and Settings:

- 1. Daisy chain your units via the XLR connector on the rear of the unit. Use standard XLR data cables to link your units together. Remember that the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (primary) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
- 2. Connect the first "Secondary" unit to the "Primary."
- 3. **"Primary" Unit:** Activate the "Primary" setting located in the **"PERSNLTY"** menu. **"Secondary" Unit(s):** Activate the "Secondry" setting located in the **"PERSNLTY"** menu.
- 4. Set the "Primary" unit to your desired mode of operation.
- 5. The Secondary unit(s) will now follow the Primary unit.


Pixel Zones 1-5

FRONT VIEW

ZONE		ZONE 2	ZONE 3	ZONE 4	ZONE 5
	• •				
		©	©	©	

REAR VIEW

ZONE 5	ZONE 4	ZONE 3	ZONE 2	ZONE 1
		● <u><u> </u></u>	●	

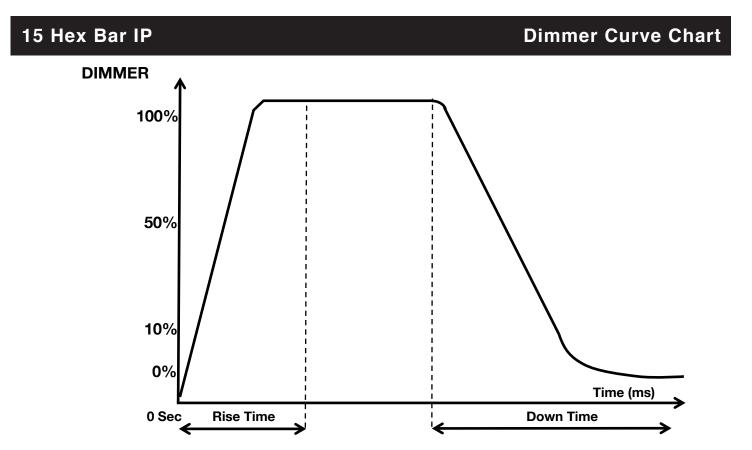

	0 sec Fade Time		1 sec Fade Time	
Dimming Curve Ramp Effect	0	255	0	255
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
тν	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

Glare Shield Installation

The 15 Hex Bar IP comes with an attachable glare shield. The glare shield is easy to install using the directions below. If you have any questions regarding installation, please contact ADJ customer support.

1. Locate the three (3) screw holes located on either side of the unit.

2. Line up the three (3) glare shield thumb screws with the three (3) thumb screw holes located on either side of the unit. Screw the thumb screws in and tighten. **DO NOT** overtighten.

15 Hex Bar IP


Filter Installation


The 15 Hex Bar IP comes with an optional frost/diffuser filter. The filter is easy to install using the directions below. If you have any questions regarding installation, please contact ADJ customer support.




Locate the filter slot door located at either end of the unit. Pull and hold the slot door down and gently slide the frost/diffuser filter in. Make sure the filter is all the way inside before releasing the slot door to close.

ADJ Products, LLC - www.adj.com - 15 Hex Bar IP User Manual Page 26

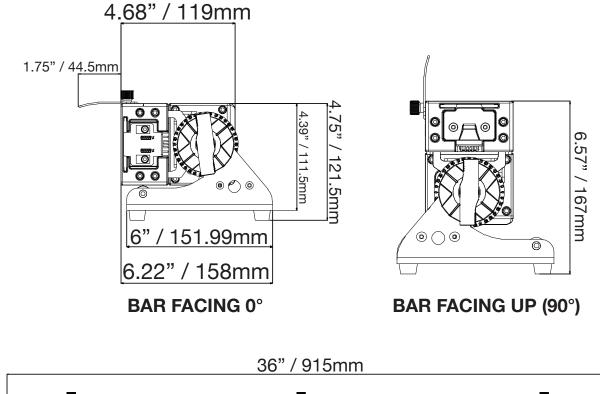



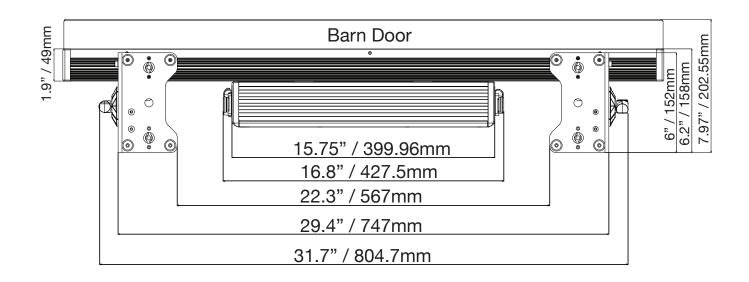

Multiple Unit Power Linking

With this feature you can connect the fixtures to one another using the power cable input and output sockets.

NOTE: USE CAUTION WHEN POWER LINKING OTHER FIXTURES AS THE POWER CONSUMPTION OF OTHER MODEL FIXTURES MAY EXCEED THE MAX POWER OUTPUT ON THIS FIXTURE! CHECK SILK SCREEN FOR MAX AMPS.

15 Hex Bar IP

Trouble Shooting

Cleaning

Listed below are a few common problems the user may encounter, with solutions.

Unit not responding to DMX:

1. Check that the DMX cables are connected properly and are wired correctly (pin 3 is "hot"; on some other DMX devices pin 2 may be 'hot'). Also, check that all cables are connected to the right connectors; it does matter which way the inputs and outputs are connected.

15 Hex Bar IP

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

- 1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
- 2. Clean the external optics with glass cleaner and a soft cloth every 20 days.

3. Always be sure to dry all parts completely before plugging the unit back in. Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

MANUFACTURER'S LIMITED WARRANTY

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service you must obtain a Return Authorization number (RA#) before sending back the product–please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in it's original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintnance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear indentifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

MANUFACTURER'S LIMITED WARRANTY PERIODS:

- Non L.E.D. Lighting Products = 1-year (365 days) Limited Warranty (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- Laser Products = 1 Year (365 Days) Limited Warranty (excluding laser diodes which have a 6 month limited warranty)
- L.E.D. Products = 2-year (730 days) Limited Warranty (excluding batteries which have a 180 day limited warranty). Note: 2 Year Warranty only applies to purchases within the United States.
- StarTec Series = 1 Year Limited Warranty (excluding batteries which have a 180 day limited warranty).
- · ADJ DMX Controllers = 2 Year (730 Days) Limited Warranty

Model: 15 Hex Bar IP			
Voltage:	100V ~ 240V/50~60Hz		
LEDs:	15 x 12W HEX (6-in-1) RGBWA+UV LEDs		
IP Rating:	IP65		
Working Position:	Any safe working position		
Power Draw:	130W		
Dimensions:	36" (L) x 6.22" (W) x 6.57" (H)		
	915 x 158 x 167mm		
Weight:	20 lbs. / 9 kg.		
Colors:	RGBWA+UV Color Mixing		
Control:	DMX, RDM (Remote Device Management)		
DMX Channels:	10 DMX Modes: 6 / 9 / 12 / 14 / 17 / 30 / 33 / 38 / 41 / 60		
Warranty:	2 Year (730 days)		
Approvals / Rating:	CE Certified		

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.